8102REUCL000800 // FT-2W902R Guide REV1

# COMPUSTAR QUICK START CARD

### 2W902R-SP



⋳	Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 4 seconds to activate panic/vehicle locater.
ថ	Tap the Unlock Button to unlock your doors and/or disarm your vehicle. Hold this button for 2.5 seconds to reset your remote start run time.
s)	Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.
డాని	Hold this button for 2.5 seconds to start your vehicle. Your remote's LED will blink showing the remote start run time. Repeat and your vehicle will shut off.
( 🖯 + 🕁 )	Tap these two buttons at the same time to turn the horn or siren chirps on or off. Hold them for 2.5 seconds to turn your FT-DAS or Shock Sensor on or off.
(₣+☶)	Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap buttons to turn on.
(F+ 🖘)	Tap these two buttons to activate Timer Start. Your vehicle will start every 1.5 or 3 hours or depending on temperature settings.
(భ + లాం)	Tap these two buttons to activate Passive locking/arming. Your system will lock/arm after 30 seconds if enabled.

Firstech, LLC. | 1

## COMPUSTAR QUICK START CARD

### 2W902R-SP

#### **FUNCTION BUTTON TABLE**

	REMOTE	OPTON	MENU
--	--------	-------	------

F Then Press	€	ື	3	లాల	BUTTON	FEATURE
] x	Drive Lock On/Off	Turbo Timer On/Off	Auxiliary 1	Auxiliary 2	(డా + లాం)	Enter and Exit Menu: Hold these buttons for 2.5 seconds to enter and exit the Remote Option Menu.
LEDS					Ð	Half or Full Paging: Half paging for remote start alerts only. Full paging for alarm and remote start alerts. If Hal paging is on, the LED will flash blue. Full paging will
EVENT		LEDS	LED DURATION	REMOTE CHIRPS	0	flash red. Turns the silent mode on or off. If on, LED will flash blue
Runtime Remaining: 1	100%	Blue Flash		6 Times	đ	When turned off, the LED will flash red.
Runtime Remaining: 6		Purple Flash	Once Every 6 Seconds	N/A	S)	2nd Car Mode: Control another vehicle with the same system installed. If on, the LED will flash blue.
Runtime Remaining: 3	33%	Red Flash		1.973	_	Auto Button Lock: Locks all buttons on the remote after a
All Command Confirmations		Blue Flash	1 or 2	1 or 2	<del>64</del> 0	minute. Tap any button to unlock then a button(s) to send a command. If on, the LED will flash blue.
All Error Confirmation	ıs	Red Flash	3 Times	3 Times	_	

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Function and Trunk buttons or turn the Ignition On and then tap the foot brake 10 times or reprogram your remote(s).

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

Firstech, LLC. | 2