COMPUSTAR QUICK START CARD

~⊙

2WT11R-SS



d A	A tap of this	button will lock	your doors	and/or arm your	Compustar alarm.
-----	---------------	------------------	------------	-----------------	------------------

A tap of this button will unlock your doors and/or disarm your Compustar alarm.

Holding this button for 2.5 seconds will pop your trunk, if equipped. If not, ask your Compustar Dealer for details on how to get it.

Holding this button for 2.5 seconds will start your vehicle. The 2WT11R-SS will receive a page back alert and run time countdown timer will start. Run Time Extension: If enabled, double tapping this button will reset your remote start run time or turbo timer.

(1) + 1) Tapping these two buttons will mute and unmute the siren on your Compustar alarm. Holding them for 2.5 seconds will turn the Shock Sensor on or off.

Function Button: This button is used to access advanced remote functions. Please see the following table for more info.

Wake/Mute Button: Tap this button to wake the screen. Hold this button for 2 seconds to mute your remote. Hold for 2 seconds to unmute.

Rechargeable Battery: Your 2WT11R-SS is equipped with a rechargeable battery. Use the included FT-USB CHARGER to charge	F	Then Press	Ð	6	€	~	2.5 Sec	5 0 2.5 Sec
your remote. We recommend charging your remote before first use. Charge time is	1 x		Drive Lock On/Off	Turbo Timer On/Off	Auxiliary 1	Auxiliary 2	Auxiliary 3	Auxiliary 4
approximately 2 hours. Register online at www.compustar.com within 10 days of purchase to activate your	2 x		2nd Car On/Off	Timer Start On/Off	Auxiliary 5	Auxiliary 6	Auxiliary 7	
new remote's warranty.	3 x		Valet Mode On/Off	Passive Mode On/Off	FUNCTION BUTTON TABLE			ABLE

Firstech, LLC. | 1

2WT11R-SS_QuickCard line.indd 1 2015/7/23 8:59:19

COMPUSTAR QUICK START CARD

2WT11R-SS

REMOTE OPTION MENU

FEATURE	LCD READOUT	Ð	ெ	FUNCTION/DESCRIPTION
Enter Remote Menu		5 + ∽ 5 Seconds)	Enter and Exit the Remote Option Menu
Move Through Menu	F			Moves down the Remote Option Menu
Move Up Menu	~			Moves back up the Remote Option Menu
Clock	1200PM	Adjusts Hour	Adjusts Minute	Sets the time on your remote
Remote Start Time	7 IOAM	Adjusts Hour	Adjusts Minute	Sets the time at which you want your vehicle to start every day. Check with your installer for additional info.
Alarm Clock Time	500AM	Adjusts Hour	Adjusts Minute	Sets the time in which you would like the remote's alarm clock to alert you.

To reprogram your remote, cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. Then tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

	FEATURE	LCD READOUT	0	Ð	FUNCTION/DESCRIPTION
	Alarm On/ Off	Alarm	On or Off		Turns the alarm clock on or off
	Button Lock	Hold	Auto or Manual		Turns automatic button lock feature on or off. If on, you must tap a button to wake your remote up. Then hit the function you would like to trigger.
	RPS Call On/Off	Call	On or Off		Turns your RPS Touch paging feature on or off.
	Silent	Vibrate	On or Off		Turns the silent mode on or off.
	Volume	VOL:	1 - 3		Adjust the volume of your remote. 1 is the lowest. 3 is the highest.
	Temperature	Temp	F or C		Changes the temperature readout from Fahrenheit to Celsius.
	Auxiliary	AUX	On or Off		Turns your Auxiliary Extender feature on or off.
	2 Way Paging Display	Paging	Full or Half		Sets your remote for Alarm or Starter Only systems. Set to FULL for ALARM IT and MAX IT features. Set to HALF for START IT ONLY systems.
	Screen Timeout	Screen	Adjusts screen off time		Adjusts the time your LCD will stay on after a button is pressed
Γ.	Language	English / Francais / Espanol	Adjusts Language		Changes LCD display language from English to French or Spanish

Firstech, LLC. | 2

2WT11R-SS_QuickCard line.indd 2 2015/7/23 8:59:23