


2 WAY 4 BUTTON LED REMOTES

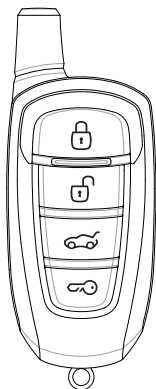

Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 3.5 seconds to activate panic/vehicle locator.



Tap the Unlock Button to unlock your doors and/or disarm your vehicle.



Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.



Hold this button for 2.5 seconds to start your vehicle. Your remote's LED will blink showing the remote start run time. Repeat and your vehicle will shut off.



Auxiliary 1: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Trunk release button.



Auxiliary 2: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Start button.



Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap buttons to turn on. Hold them for 2.5 seconds to turn your FT-DAS or Shock Sensor on or off.



Tap these two buttons at the same time to turn the horn or siren chirps on or off.



Tap these two buttons to activate Passive locking/arming. Your system will lock/arm after 30 seconds if enabled. Hold these two buttons for 5 seconds to activate 2nd Car Mode. Your LED will switch from amber to red. *Red LED denotes 2nd Car Mode.

FIRSTECH, L.L.C. QUICK START CARD

2 WAY 4 BUTTON LED REMOTES

LEDS

EVENT	LEDS	LED DURATION	REMOTE CHIRPS
Runtime Remaining: 100%	Green Flash	Once Every 6 Seconds	6 Times
Runtime Remaining: 50%	Amber Flash		N/A
Runtime Remaining: 25%	Red Flash		
Runtime Remaining: 60 Sec.	Red Flash		
All Command Confirmations	Green Flash	1 or 2	1 or 2
All Error Confirmations	Green/Red Flash	3 Times	3 Times
Arming/Locking While Trigger is Open	Red Flash		

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Lock and Trunk buttons or turn the Ignition On and then tap the foot brake 10 times or reprogram your remote(s).

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

START ERROR CODES

PARKING LIGHT FLASHES	REMOTE START ERROR
3 then 1	1: Motor running
3 then 2	2: Key in ignition on position
3 then 3	3: Door open (manual transmission only)
3 then 4	4: Trunk open
3 then 5	5: Foot brake on
3 then 6	6: Hood open
3 then 7	7: Reservation off (manual transmission only)
3 then 8	8: Tach or voltage sensing failure
3 then 9	9: FT-DAS sensor shutdown
3 then 10	10: System is in Valet Mode

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

Firstech, LLC. | 2