


# COMPUSTAR® QUICK START CARD

## 2W901R-SS

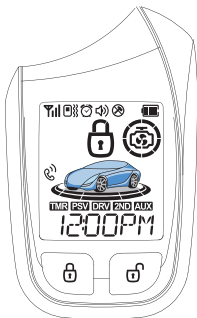

A tap of this button will lock your doors and/or arm your Compustar alarm.



 
A tap of this button will unlock your doors and/or disarm your Compustar alarm.



Holding this button for 2.5 seconds will pop your trunk, if equipped. If not, ask your Compustar Dealer for details on how to get it.



Holding this button for 2.5 seconds will start your vehicle. The 2W901R-SS will receive a page back alert and run time countdown timer will start. Run Time Extension: If enabled, double tapping this button will reset your remote start run time or turbo timer.



Tapping these two buttons will mute and unmute the siren on your Compustar alarm. Holding them for 2.5 seconds will turn the Shock Sensor on or off.



Function Button: This button is used to access advanced remote functions. Please see the following table for more info.

**Rechargeable Battery:** Your 2W901R-SS is equipped with a rechargeable battery. Use the included FT-USB CHARGER to charge your remote. We recommend charging your remote before first use. Charge time is approximately 1.5 hours.

Register online at [www.compustar.com](http://www.compustar.com) within 10 days of purchase to activate your new remote's warranty.



**Then Press**



1 x

Drive Lock  
On/Off

Turbo Timer  
On/Off

Auxiliary 1

Auxiliary 2

Auxiliary 3

Auxiliary 4

2 x

2nd Car  
On/Off

Timer Start  
On/Off

Auxiliary 5

Auxiliary 6

Auxiliary 7

3 x

Valet Mode  
On/Off



 





Passive Mode  
On/Off

### FUNCTION BUTTON TABLE



# COMPUSTAR® QUICK START CARD

2W901R-SS

## REMOTE OPTION MENU

FEATURE	LCD READOUT			FUNCTION/DESCRIPTION
Enter Remote Option Menu	 2.5 Seconds			Enter and Exit the Remote Option Menu
Scroll Through Menu				Moves down the Remote Option Menu
Scroll Up Menu				Moves back up the Remote Option Menu
Time		Adjusts Hour	Adjusts Minute	Sets the time on your remote
Remote Start Time		Adjusts Hour	Adjusts Minute	Sets the time at which you want your vehicle to start every day. Check with your installer for additional info.
Alarm Clock Time		Adjusts Hour	Adjusts Minute	Sets the time in which you would like the remote's alarm clock to alert you.
Alarm Clock	AL - OFF / AL - ON	On	Off	Turns the alarm clock on or off.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5PM PST. Also please visit [www.compustar.com](http://www.compustar.com) for a complete user's manual.

FEATURE	LCD READOUT			FUNCTION/DESCRIPTION
Button Lock	HOLD - M / HOLD - A	Auto	or Manual	Turns the automatic button lock feature on or off. If on then you must tap a button to wake your remote up. Then hit the function you would like to trigger.
RPS	RPS - ON / RPS - OFF	On	or Off	Turns your RPS Touch paging feature on or off.
Vibrate	VI - OFF / VI - ON	On	or Off	Turns the silent mode on or off.
Temperature	TEMP - F / TEMP - C	F	or C	Changes the temperature readout from Fahrenheit to Celsius.
Auxiliary	AUX - OFF / AUX - ON	On	or Off	Turns your Auxiliary Extender feature on or off.
2 Way Paging Display	FULL / HALF	Full	or Half	Determines whether your remote is used for Alarm or Starter Only systems. Set to FULL for ALARM IT and MAX IT features. Set to HALF for START IT ONLY systems.

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

Firstech, LLC. | 2