




QUICK START CARD

8102REUCL001101 // 2W940R-SS Guide REV1.2

2W940R-SS

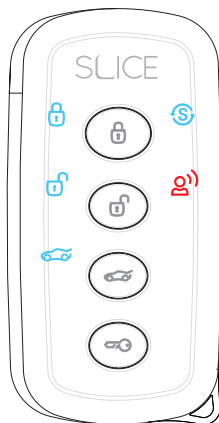

A tap of this button will lock the doors on your Compustar remote starter.



A tap of this button will unlock the doors on your Compustar remote starter.



Holding this button for 2.5 seconds will pop your trunk, if equipped. If not, ask your Compustar Dealer for details on how to get it.



Holding this button for 2.5 seconds will start your vehicle. Slice will blink the Start icon and other LEDs showing the remote start run time.



Tapping these two buttons at the same time will turn Valet Mode on or off on your system. Holding them for 2.5 seconds will turn the Shock Sensor on or off.



















Tapping these two buttons will mute and unmute the factory horn on your Compustar remote starter.

Register online at www.compustar.com within 10 days of purchase to activate your new Slice remote's warranty. To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.





Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

Firstech, LLC. | 1

LEDS

EVENT	LEDS	LED DURATION	REMOTE CHIRPS
Runtime Remaining: 100%	   	Once Every 6 Seconds	6 Times
Runtime Remaining: 75%	  		N/A
Runtime Remaining: 50%	 		
Runtime Remaining: 25%			
All Command Confirmations	 	1 or 2	1 or 2
All Error Confirmations	 		
Locking While Trigger is Open	 	3 Times	3 Times

REMOTE OPTION MENU

BUTTON	FEATURE
 	Enter and Exit Menu: Hold these buttons for 2.5 seconds to enter and exit the Remote Option Menu.
	Silent Mode/Vibration: Turns vibrate only mode on or off. If on, the Unlock LED will change to blue.
	2nd Car Mode: Control another vehicle with the same Slice system installed. If on, the Trunk LED will illuminate blue.