

1WFMIR One-Way FM Remote(Alarm/Starter)

USER'S GUIDE

FCC ID : 0447J1000R

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

USER'S GUIDE

1WFMIR

FCC ID : 0447J1000R

By Firstech, Inc.

Website : www.compuSTAR.org

By Firstech, Inc.


TABLE OF CONTENTS

• Safety Information	Page 4
• Remote Button Functions	Page 5
• Remote Learn Routine	Page 6
• Keyless Entry/ Alarm Mode	Page 6
• Dual Stage Shock Sensor	Page 7
• Auto-Start Function	Page 7
• Reservation Mode	Page 8
• Trunk Release	Page 10
• Panic Mode	Page 10
• Valet Mode	Page 10
• Timer Start Mode	Page 11
• Safety Shutdown Features	Page 11
• Optional Programmable Features	Page 11
<i>Ignition Lock</i>	Page 11
<i>Passive Arming</i>	Page 12
<i>Turbo Mode</i>	Page 12
• Optional Installation Features	Page 12
<i>Cold Start Mode</i>	Page 12
<i>Optional Outputs Auxiliary 1 & Auxiliary 2</i>	Page 13
• Limited Lifetime Consumer Warranty	Page 14
• Your Warranty	Page 15

Safety Information

Please take these safety precautions into consideration, under the following conditions :

1. Servicing the vehicle

When servicing your automobile (i.e. changing the oil, washing your car), the CompuStar system should be in Valet Mode. There is a safety shutdown switch under the hood that deactivates the remote starter function if the hood is open. However, if the switch has been damaged or the switch has been installed improperly, the vehicle may start when  Button is pressed for 2 seconds even if the hood is open.

2. Lending your vehicle to others

Whenever you loan your vehicle to an individual who is not familiar with CompuStar, please put the vehicle in Valet mode. This will prevent the vehicle loaner from accidentally activating the CompuStar auto-security system.

3. For manual transmission vehicles

If the CompuStar 1WFM/R is installed in a manual transmission vehicle, extra precautions are required because the CompuStar does not monitor the gear shift :

Important!

Under normal circumstances, Reservation Mode is cancelled when a door or hatchback opens. Please verify if the opening of any door or hatchback cancels Reservation Mode. If any of the doors or hatchback is not monitored by CompuStar because of improper installation or a faulty dome light switch, do not use the CompuStar and take your vehicle to the dealer immediately for repair.






 




 




Do not set Reservation Mode when the window(s) are open or if there is anyone inside of the vehicle, including animals.

Remote Button Functions

Note : For Panic, Trunk, Start and Stop, and Programming Options, push

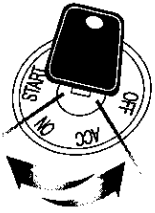 
2 seconds or more. " () " means simultaneously pressing the button

The LED turns on while the remote is transmitting.

	Button	Function
1		Panic
2		Lock/Arm
3		Unlock/Disarm
4		Trunk
5		Remote Start (Aux 1 for CM3300)
6		Remote Start Off (Aux 2 for CM3300)
7		Aux 1
8		Aux 2
9		Siren Chirps for Lock/ Unlock- on/off
10		Valet
11		Passive Arm/ Lock
12		Timer Start
13		Turbo
14		Installer Only. Programming Option 1. See the wiring & installation guide.
15		Installer Only. Programming Option 2. See the wiring & installation guide.

Remote Learn Routine

If you replace or add additional remotes, you can program up to three remotes, please perform the following procedure :



Step 1 : Activate Valet/Programming mode by manually turning the ignition on and off five times (between Acc and On) with car key within a 10 second period.
The parking lights will flash once with successful completion of this step.

Step 2 : Within a 10 second period after cycling the ignition for the 5th time, press the **A** Button. The car parking lights will flash once to confirm that the transmitter has been programmed. Continue to program the additional remotes. The parking lights will flash two times when the programming mode is expired.

Keyless Entry/Alarm Mode

You can lock/arm or unlock/disarm by pressing **A** Button or **⌂** Button.

Press Buttons **A** and **⌂** simultaneously to make your car siren mute when arming or disarming your vehicle. Keep in mind that your car siren will still activate for all other modes (i.e. panic, alarm, shock sensor) regardless of whether or not your car siren is in mute mode. The car siren will be mute only when arming or disarming your vehicle.

In alarm mode, the starter kill function (this maybe an optional feature provided by your installer) is activated. This feature disengages the starter mechanism on your car that prevents you from starting your car even with a manual key when your vehicle's alarm mode is activated.

Note : If you lose your remote after you have armed the vehicle, use your key to open the vehicle. The siren will go off. Turn the ignition on and off 5 times with your key to shut off the siren and turn the system into valet mode. Cancel the valet mode with remote later. See Valet mode.

Note : (Siren duration is 30 to 60 sec depending on the options set at the time of initial installation.)

Dual Stage Shock Sensor

The dual stage shock sensor will activate 30 seconds after the CompuStar alarm mode is armed. When the dual shock sensor is engaged, the following will trigger the remote security alerts :

- Light impact to your vehicle will activate the first stage shock sensor and the car siren will chirp 4 times in addition to the parking lights flashing 4 times.
- Heavy impact to your vehicle will activate the second stage shock sensor and the car siren will sound for 30 to 60 seconds and the parking lights will flash for 30 to 60 seconds. Press the **⌂** Button to turn off the siren and flashing lights.

Auto-Start Function

Press the **⌂** Button for 2 seconds to auto-start an automatic transmission engine. Remember that a manual key in the ignition is required to drive the car.

In addition, the anti-grind circuit (this maybe an optional feature provided by your installer) prevents you from re-cranking the starter on a remote-started vehicle.

Press the **⌂** Button for 2 seconds in order to turn off an auto-started car. For manual transmission vehicles, please use reservation mode.

The engine will run 15 or 25 minutes (25 or 40 min for diesel) depending on preset options at the time of installation and then shut off. If your remote has a problem starting the vehicle, CompuStar will try 2 additional times. If the engine does not start after the third attempt, please call your authorized CompuStar dealer.

Continuation Mode :

While your vehicle is running with your key, if you press **⌂** button for 2 seconds, you are now in the continuation mode. Your engine will continue running for the preset time even if you take your key from the ignition. With this mode, the engine will continue running without key during your quick stop at, for example, a grocery store.

Diagnosing problems with Auto-Start

If there is a problem in auto-starting your car, you will hear three chirps when you attempt to auto-start the car. Wait for 2 seconds and the cause for the error will be indicated by the number of times the car chirps and parking lights flash.

Error Number (# of times the car chirps & parking lights flash)	Error Reason
1	Engine On
2	Key On
3	Door Open
4	Trunk Open
5	Brake/E-Brake On
6	Hood Open
7	Reservation Off (Manual Transmission Only)

Reservation Mode (manual transmission only)

In order to auto-start your manual transmission car, you must first set the CompuStar system to Reservation Mode before leaving your vehicle. The purpose of Reservation Mode is to leave the transmission gear in the neutral position when you leave your vehicle. Reservation mode is intended for use in MANUAL TRANSMISSIONS ONLY and NOT FOR AUTOMATIC TRANSMISSIONS. Reservation Mode must be engaged each and every time you leave your manual transmission car in order to auto-start the vehicle.

Note : The system is not recommended for vehicles with removable tops.

■ Important Requirements to activate Reservation Mode

- The transmission must be in the NEUTRAL position.
- The vehicle windows must be rolled up.
- Do not set the reservation mode with people in the vehicle.
- Do not auto-start the car with people in the vehicle.

■ Activating Reservation Mode (MANUAL TRANSMISSION ONLY)

Step 1 : After arriving at your destination, and BEFORE TURNING YOUR ENGINE OFF, place the transmission in the Neutral position.

Step 2 : Remove your foot from the foot brake.

Step 3 : Activate the parking brake.


Step 4 : Remove the key from the ignition. The engine will remain running.

Step 5 : Exit the vehicle and close the door within two minutes after activating the parking brake. The engine will shut off and reservation mode for the remote starter is now complete.

Your vehicle is now ready for auto-starting. However, the reservation mode will be cancelled if the door is opened or the CompuStar system is put in Valet mode after the reservation has been set. Once cancelled, you will have to start the vehicle with the manual key and repeat the above 5 steps if you want to restore reservation mode.

Important!

If you try to auto-start the vehicle when reservation mode has not been set or turned on, the auto-start feature will not work.

When you press the  button, the car parking lights will flash five times and the siren will chirp three times. A couple of seconds later, the cause for the error will be indicated by the number of times the car chirps and flashes the parking lights. See Page 9 for error messages.

■ Canceling Reservation Mode

If you do not want to set reservation mode, shut off the engine before you exit the vehicle. The engine will shut off for the following reasons :


- You did not activate the parking brake or pressed the foot brake when you turned the manual key to the off position.
- You released the parking brake while the engine was running.
- You entered Valet Mode after the Reservation Mode has been completed.

■ Error Messages

If there is a problem in auto-starting your car, you will hear three chirps when you attempt to auto-start the car. Wait for 2 seconds and the cause for the error will be indicated by the number of times the car chirps and flashes the parking lights.

Error Number (# of times the car chirps & parking lights flash)	Error Reason
1	Engine On
2	Key On
3	Door Open
4	Trunk Open
5	Brake On, Emergency Brake Released
6	Hood Open
7	Reservation Off (Manual Transmission Only)

Trunk Release

Press  Button for 2 seconds in order to unlock and release your trunk door. Note that the trunk release function will not only release the trunk but will unlock all the doors and disarm the alarm as well.

Panic Mode



Press  Button for 2 seconds to enter Panic Mode. In this mode, the car will arm if not armed already and the siren will activate and the parking lights will flash. In order to disengage Panic Mode, press the  or  Button.

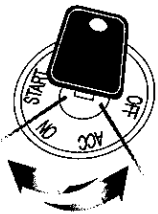 
If **Anti-Jacking** option has been programmed (ask your dealer if you would like to have this option) and the Ignition-Kill has been installed, the Panic Mode works as Anti-Jacking if the car key in the ignition. If Anti-Jacking mode is activated while key is in the ignition,

 
 
- a) The siren will go off for 1.5 minutes.
- b) Ignition-Kill will be activated after the first 30 seconds.

That is to give warning to the hijacker for the first 30 seconds and then to disconnect the ignition after that to stop the vehicle

 
 
Valet Mode

In order to enter Valet mode, press the  and  buttons simultaneously. In order to manually enter Valet Mode, insert your car key into the ignition and turn the ignition on and off (between ACC and ON) five times within 10 seconds.



You can exit Valet Mode only by pressing the  and  Buttons simultaneously.

Timer Start Mode

In Timer Start Mode, your car automatically starts every 1.5 or 3.0 hours, depending on preset options during the time of installation, for a 24-hour period. This mode is deleted automatically after 24 hours or once you start your car with either your manual key or remote. In order to enter Timer Start Mode, press the  and  buttons simultaneously.

Also, note that Timer Start Mode becomes **Cold Start Mode** once an optional temperature sensor is installed.

Important!

Timer Start Mode should be used only in open areas. Never start and run the vehicle in an enclosed space such as a garage or carport.

Safety Shut Down Features

CompuStar 1W/FMR system has several shut down safety features. The following actions will shut down the engine or prevent the car from auto-starting : Opening of the car engine hood, pressing of the brake or Valet mode is turned on.

OPTIONAL PROGRAMMABLE FEATURES

These additional programmable features can be programmed to the CompuStar system by your authorized CompuStar dealer.



Ignition Lock

Automatic Transmission Vehicle: This programmable option enables your vehicle to automatically lock the doors upon starting the vehicle with a key.

In addition, the vehicle will automatically unlock the doors upon pulling the key out from the ignition. This option must be chosen at the time of installation.



Manual Transmission Vehicle or Turbo Mode : This programmable option will lock the doors in 5 seconds after starting the vehicle with a key and the emergency brake is released.

Passive Arming

You can turn this function on or off by pressing the  and  buttons simultaneously. When set to passive arming, your security system will arm automatically, 30 seconds after all the car doors are closed. There are two types of passive arming that can be programmed by your CompuStar dealership: (1) passive arming with passive lock and (2) passive arming with active lock.

Passive locking means the door will lock when the system passively arms. In the default factory setting, the system is armed and locked actively, which means the system will only arm/lock when the remote is utilized.

Turbo Mode



If this optional Turbo Mode has been programmed at the time of installation, you can turn this feature on and off by pressing the  and  buttons.

Under this mode, the engine continues to run for 2 minutes after key has been taken out of the ignition, if emergency brake was set when the key is taken out. To utilize this mode, the emergency brake sensing wire has to be connected to the emergency brake wire of the vehicle. Consult the authorized dealer for this mode.

OPTIONAL INSTALLATION FEATURES

The CompuStar 1WFMIR remote has additional features and expansion possibilities that require additional parts and labor.

Cold Start Mode

If the optional temperature sensor has been installed, Timer Start Mode becomes Cold Start Mode. Under this mode, your car automatically starts if the temperature inside the vehicle goes below the preset temperature. The minimum interval between the starts will be 1.5 or 3.0 hours depending on preset options during the time of installation. Cold Start Mode is activated or deactivated by pressing the  and  buttons.

Optional Outputs Auxiliary 1 & Auxiliary 2

The auxiliary system is an optional output feature that can be tailored for your vehicle by your local authorized CompuStar dealership. For example, you can customize your car to have remote control of your windows, radio, and sunroof in addition to the rooftop on your convertible car.

Limited Lifetime Consumer Warranty

Firstech, Inc. Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product.

When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to Firstech, Inc., 801 E. 82nd Ave Suite 1 Anchorage, Alaska 99518, USA within the warranty period, and if the product is defective, Firstech, Inc. will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH.

THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages.

This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

Firstech, Inc. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE that may or may not resulted from the operation of CompuStar. NOT WITH STANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Your warranty

The product's warranty is automatically void if its date code or serial number is defaced, missing or altered.

This warranty will not be valid unless you have completed the registration card and mailed it to Firstech, Inc., within 10 days after the purchase to the address listed on the registration card.