


700R - 600R

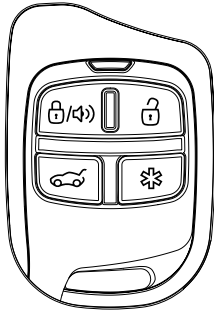

Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 3.5 seconds to activate panic/vehicle locator.



Tap the Unlock Button to unlock your doors and/or disarm your vehicle.



Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.



 
Hold this button for 2.5 seconds to start your vehicle. Your vehicle's parking lights will flash once and/or siren will chirp once for confirmation. Repeat and your vehicle will shut off.



 
Auxiliary 1: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Trunk release button.



Auxiliary 2: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Start button.





Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap these two buttons to turn on. Hold them for 2.5 seconds to turn your Shock Sensor on or off.



Tap these two buttons at the same time to turn the horn or siren chirps on or off.



Tap these two buttons to activate Passive locking/arming. Your system will lock/arm after 30 seconds if enabled.

() + ()

Tap these buttons to activate ignition controlled door locks. Your doors will lock or unlock when you turn the key on or off. If you have a remote start, your doors will lock when you press the foot brake.

ALARM LED CODES

If you have an alarm and optional LED(s) installed, it will flash once a second if armed. If your alarm is triggered then the LED(s) will flash more than once until it is disarmed. See the table below for what each LED code represents.

ALARM TRIGGER EVENT	LED FLASHES
Door, Hood, Trunk, or Ignition On triggered	2, Pause, Then Repeat
Full triggered shock sensor	3, Pause, Then Repeat
Panic Mode	5, Pause, Then Repeat

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Lock and Trunk buttons at the same time.

START ERROR CODES

PARKING LIGHT FLASHES	REMOTE START ERROR
3 then 1	1: Motor running
3 then 2	2: Key in ignition on position
3 then 5	5, Foot brake on
3 then 6	6: Hood open
3 then 8	8: Tach or voltage sensing failure
3 then 10	10: System is in Valet Mode

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.