


COMPUSTAR® QUICK START CARD

2W902R-SP

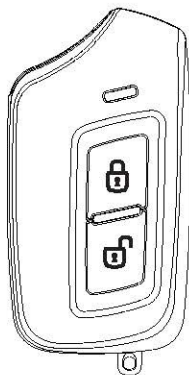

Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 4 seconds to activate panic/vehicle locator.



 
Tap the Unlock Button to unlock your doors and/or disarm your vehicle. Hold this button for 2.5 seconds to reset your remote start run time.



Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.



Hold this button for 2.5 seconds to start your vehicle. Your remote's LED will blink showing the remote start run time. Repeat and your vehicle will shut off.



 
Tap these two buttons at the same time to turn the horn or siren chirps on or off. Hold them for 2.5 seconds to turn your FT-DAS or Shock Sensor on or off.



Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap buttons to turn on.





Tap these two buttons to activate Timer Start. Your vehicle will start every 1.5 or 3 hours or depending on temperature settings.



Tap these two buttons to activate Passive locking/arming. Your system will lock/arm after 30 seconds if enabled.

FUNCTION BUTTON TABLE

F	Then Press				
1 x		Drive Lock On/Off	Turbo Timer On/Off	Auxiliary 1	Auxiliary 2






LEDS

EVENT	LEDS	LED DURATION	REMOTE CHIRPS
Runtime Remaining: 100%	Blue Flash	Once Every 6 Seconds	6 Times
Runtime Remaining: 66%	Purple Flash		N/A
Runtime Remaining: 33%	Red Flash	1 or 2	1 or 2
All Command Confirmations	Blue Flash		
All Error Confirmations	Red Flash	3 Times	3 Times

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Function and Trunk buttons or turn the Ignition On and then tap the foot brake 10 times or reprogram your remote(s).

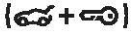Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

REMOTE OPTION MENU

BUTTON	FEATURE
	Enter and Exit Menu: Hold these buttons for 2.5 seconds to enter and exit the Remote Option Menu.
	Half or Full Paging: Half paging for remote start alerts only. Full paging for alarm and remote start alerts. If Half paging is on, the LED will flash blue. Full paging will flash red.
	Turns the silent mode on or off. If on, LED will flash blue. When turned off, the LED will flash red.
	2nd Car Mode: Control another vehicle with the same system installed. If on, the LED will flash blue.
	Auto Button Lock: Locks all buttons on the remote after a minute. Tap any button to unlock then a button(s) to send a command. If on, the LED will flash blue.

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.