



-  A tap of this button will lock your doors and/or arm your Compustar alarm.
-  A tap of this button will unlock your doors and/or disarm your Compustar alarm.
-  Holding this button for 2.5 seconds will pop your trunk, if equipped. If not, ask your Compustar Dealer for details on how to get it.
-  Holding this button for 2.5 seconds will start your vehicle. Slice will blink the Start icon and other LEDs showing the remote start run time.
-   Tapping these two buttons at the same time will turn Valet Mode on or off on your system. Holding them for 2.5 seconds will turn the Shock Sensor on or off.
-   Tapping these two buttons will mute and unmute the siren on your Compustar alarm.

Register online at www.compustar.com within 10 days of purchase to activate your new Slice remote's warranty.

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

ALARM LEDS

LEDS	DESCRIPTION	REMOTE CHIRPS
  	1 or more door trigger zones violated	Chirps and vibrates for 50 seconds or until button pressed
  	Trunk, Hood, or DAS tilt trigger zone violated	
  	Ignition triggered	
 	Prewarn shock sensor	8
	Full trigger shock sensor	Chirps for 15 seconds

LEDS

EVENT	LEDS	LED DURATION	REMOTE CHIRPS
Runtime Remaining: 100%	   	Once Every 6 Seconds	6 Times
Runtime Remaining: 75%	  		N/A
Runtime Remaining: 50%	 		
Runtime Remaining: 25%			
All Command Confirmations	 	1 or 2	1 or 2
All Error Confirmations	 	3 Times	3 Times
Arming/Locking While Trigger is Open	 		

REMOTE OPTION MENU

BUTTON	FEATURE
 	Enter and Exit Menu: Hold these buttons for 2.5 seconds to enter and exit the Remote Option Menu.
	Half or Full Paging: Half paging for remote start alerts only. Full paging for alarm and remote start alerts. If on, the Lock LED will change to blue.
	Silent Mode/Vibration: Turns vibrate only mode on or off. If on, the Unlock LED will change to blue.
	2nd Car Mode: Control another vehicle with the same Slice system installed. If on, the Trunk LED will illuminate blue.
	Auto Button Lock: Locks all buttons on the remote after a minute. Tap any button to unlock then a button(s) to send a command. If on, the Start LED will illuminate blue.